

# Lifting Point loadable from any side > B-ABA <



## Safety instructions

This safety instruction has to be kept on file for the whole lifetime of the product and forwarded with the product.

Translation of the original safety instruction



**RUD Ketten**  
Rieger & Dietz GmbH u. Co. KG  
73432 Aalen  
Tel. +49 7361 504-5438  
sling@rud.com  
www.rud.com

RUD-Art.-Nr.: 7906416-EN V10 / 04.025

**B-ABA**  
Lifting Point loadable from any side

**EG-Konformitätserklärung**

entsprechend der EG-Maschinenrichtlinie 2006/42/EG, Anhang II A und ihren Änderungen

Hersteller: **RUD Ketten**  
Rieger & Dietz GmbH u. Co. KG  
Friedensinsel  
73432 Aalen

Hiermit erklären wir, dass die nachfolgend bezeichnete Maschine aufgrund ihrer Konzipierung und Bauart, sowie in der von uns in Verkehr gebrachten Ausführung, den grundlegenden Sicherheits- und Gesundheitsanforderungen der EG-Maschinenrichtlinie 2006/42/EG sowie den unten aufgeführten harmonisierten und nationalen Normen sowie technischen Spezifikationen entspricht.  
Bei einer nicht mit uns abgestimmten Änderung der Maschine verliert diese Erklärung ihre Gültigkeit.

**Produktbezeichnung:** Anschraubpunkt starr  
B-ABA

**Folgende harmonisierten Normen wurden angewandt:**

<u>DIN EN 1677-1 : 2009-03</u>	<u>DIN EN ISO 12100 : 2011-03</u>
_____	_____
_____	_____
_____	_____

**Folgende nationalen Normen und technische Spezifikationen wurden außerdem angewandt:**

<u>DGUV-R 109-017 : 2020-12</u>	_____
_____	_____
_____	_____
_____	_____

Für die Zusammenstellung der Konformitätsdokumentation bevollmächtigte Person:  
Michael Betzler, RUD Ketten, 73432 Aalen

Aalen, den 16.04.2021      Hermann Kolb, Bereichsleitung MA

Name, Funktion und Unterschrift Verantwortlicher

**EC-Declaration of conformity**

According to the EC-Machinery Directive 2006/42/EC, annex II A and amendments

Manufacturer: **RUD Ketten**  
Rieger & Dietz GmbH u. Co. KG  
Friedensinsel  
73432 Aalen

We hereby declare that the equipment sold by us because of its design and construction, as mentioned below, corresponds to the appropriate, basic requirements of safety and health of the corresponding EC-Machinery Directive 2006/42/EC as well as to the below mentioned harmonized and national norms as well as technical specifications.  
In case of any modification of the equipment, not being agreed upon with us, this declaration becomes invalid.

**Product name:** Lifting point rigid  
B-ABA

**The following harmonized norms were applied:**

<u>DIN EN 1677-1 : 2009-03</u>	<u>DIN EN ISO 12100 : 2011-03</u>
_____	_____
_____	_____
_____	_____

**The following national norms and technical specifications were applied:**

<u>DGUV-R 109-017 : 2020-12</u>	_____
_____	_____
_____	_____
_____	_____

**Authorized person for the configuration of the declaration documents:**  
Michael Betzler, RUD Ketten, 73432 Aalen

Aalen, den 16.04.2021      Hermann Kolb, Bereichsleitung MA

Name, function and signature of the responsible person



Before initial usage of the RUD lifting point B-ABA, please read carefully the safety instructions. Make sure that you have understood all subjected matters. Non-observance can lead to serious personal injuries and material damage and eliminates warranty.

## 1 Safety instructions



### ATTENTION

Wrong assembled or damaged lifting points B-ABA as well as improper use can lead to injuries of persons and damage of objects when load drops.

Please inspect all lifting points before each use.

- Remove all body parts (fingers, hands, arms, etc.) out of the hazard area (danger of crushing or squeezing) during the lifting process.
- RUD lifting points B-ABA must only be used by instructed and competent persons considering DGUV-rules 109-017 and outside Germany noticing the country specific statutory regulations.
- No technical alterations must be implemented on the B-ABA.
- No people may stay in the danger zone.
- Jerky lifting (strong impacts) should be prevented.
- Always ensure a stable position of the load when lifting. Swinging must be prevented.
- Damaged or worn B-ABA must never be utilised.

## 2 Intended use of the B-ABA

RUD lifting points B-ABA must only be used for the assembly at the load or at lifting means.

They are intended to be hinged into lifting means.

RUD lifting points B-ABA can also be used as lashing points to attach lashing means.

Loading from any side is permitted.

RUD lifting points B-ABA must only be used in the hereby described operation purpose.

## 3 Assembly- and instruction manual

### 3.1 General information

- Capability of temperature usage:  
When used at higher temperatures the working load limit (WLL) of the lifting point must be reduced as follows:
  - -40°C up to 100°C no reduction
  - 100°C up to 200°C minus 15 %
  - 200°C up to 250°C minus 20 %
  - 250°C up to 350°C minus 25 %
  - **Temperatures exceeding 350°C are prohibited**
- RUD lifting points B-ABA must not be used with aggressive chemicals such as acids, alkaline solutions and their vapours.

- Please mark mounting position of lifting point with a coloured contrast paint for better visibility.

### 3.2 Hints for the assembly

Basically essential:

- The material construction to which the lifting point will be attached should be of adequate strength to withstand forces during lifting without deformation. The German testing authority BG/DGUV, recommends the following minimum for bolt lengths:
  - 1x M in steel (minimum quality S235JR[1.0037])
  - 1.25x M in cast iron (however when castings of lower strength [ $<200$  MPa] are used the thread engagement has to be at least  $1,5xM$ )
  - 2x M in aluminum alloys
  - 2.5x M in light metals of low strength (M = thread size, e.g. M20)
- The position of the lifting points must be carried out in such a way that unintended movement like turning or flipping will be avoided:
  - **For single leg lifts:** the lifting point should be vertically above the centre of gravity of the load.
  - **For two leg lifts:** the lifting points must be equidistant to/or above the centre of gravity of the load.
  - **For three and four leg lifts.** the lifting points should be arranged symmetrical around the centre of gravity, in the same plane if possible.
- Symmetry of loading:  
Determine the necessary WLL of each lifting point for a symmetrical load by using the following physical calculation formula:

$$W_{LL} = \frac{G}{n \times \cos \beta}$$

$W_{LL}$  = necessary WLL (kg) of lifting point / single strand (kg)  
 $G$  = weight of load (kg)  
 $n$  = number of load bearing strands  
 $\beta$  = inclination angle of single strand

Number of load bearing strands:

	symmetric
two leg	2
three / four leg	3

Table 1: Load bearing strands (compare to Table 3)



### NOTE

At unsymmetrical loads, even if several lifting points are used, the WLL of a single lifting point must be at least equal to the load weight or ask the manufacturer.

- RUD lifting points B-ABA must be installed by using the supplied ICE-bolts.  
If needed, Standard-ICE-bolts and Vario-ICE-bolts can be ordered on request (compare Table 5, Table 6, Pic. 4).
- A plane bolt-on surface must be ensured resp. provided. Blind holes must be drilled deep enough, that the supporting area of the B-ABA fits properly. Tighten bolts with required torque value (see Table 2).

Type	torque [Nm]	thread d	wrench size SW
B-ABA 1.6 t	55	M10	16
B-ABA 3.2 t	100	M12	18
B-ABA 5 t	240	M16	24
B-ABA 10 t	450	M20	30
B-ABA 20 t	800	M24	36
B-ABA 31.5 t	950	M30	46

Table 2: torque

- The execution of the threaded hole must be machined acc. to DIN 76 (Counterbore diameter at the max.  $1.05 \times d$ ). The tapped holes must be at least deep enough that the bearing surface of the lifting point sits properly at the surface of the load. Through holes must be machined acc. to DIN EN 20273-middle.
- For a single use hand tightening with a spanner is sufficient. Bolt supporting area must sit proper on bolt-on surface.
- Check finally the correct assembly (see chapter 4 *Inspection / repair / disposal*).

### 3.3 User instructions

- Always regularly observe the appearance of the whole lifting point (e.g. fixed lifting point/slings) before using it (secured bolt seat, strong corrosion, cracks on load-bearing parts, deformations). Refer to chapter 4 *Inspection / repair / disposal*.




#### ATTENTION

Wrong assembled or damaged B-ABA as well as improper use can lead to injuries of persons and damage of objects when load drops. Please inspect all B-ABA before each use.

- RUD components are designed according to DIN EN 818 and DIN EN 1677 for a dynamic load of 20,000 load cycles.
  - Keep in mind that several load cycles can occur with a lifting procedure
  - Keep in mind that, due to the high dynamic stress with high numbers of load cycles, that there is a danger that the product will be damaged
  - The BG/DGUV recommends: For higher dynamic loading with a high number of load cycles (continuous operation), the working load stress must be reduced according to the driving mechanism group 1Bm (M3 in accordance with DIN EN 818-7). Use a lifting point with a higher working load limit.
- Please check carefully the wear indicator markings of the lifting point (see *Pic. 1*):



**Usage permitted:**  
no wear marks visible

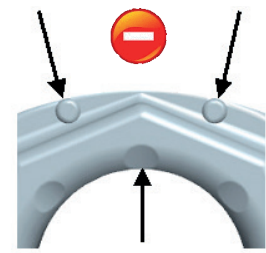

**Use prohibited:**  
Replacement criteria reached. Material all the way down to the wear lenses has gone

*Pic. 1: Wear indicators*

- To prevent unintended dismounting through shock loading, rotation or vibration, thread locking fluid such as Loctite (depending on the application, please pay attention to the manufacturer's instruction) could be used to secure the bolt, or use form-closed devices.
- Please note that the lifting mean must be free moveable within the lifting point B-ABA. When lifting means (sling chains) are hinged or unhinged, no pinching, shearing or joint spots must occur during the handling.
- Avoid damage of lifting means resulting from sharp edges.
- If the lifting point B-ABA is used solely for lashing, the value of the working load limit can be doubled:  $LC = \text{Permitted lashing force} = 2 \times \text{load-bearing capacity (WLL)}$



#### NOTE

If the B-ABA is/was used as a lashing point, with a force higher than the WLL, it must not be used as a lifting point afterwards. If the B-ABA is/was used as a lashing point, up to the WLL only, it can still be used afterwards as a lifting point.

## 4 Inspection / repair / disposal

### 4.1 Hints for periodical inspections

The operator must determine and specify the nature and scope of the required tests as well as the periods of repeating tests by means of a risk assessment (see sections 4.2 and 4.3).

The continuing suitability of the anchor point must be checked at least 1x year by an expert.

Depending on the usage conditions, f.e. frequent usage, increased wear or corrosion, it might be necessary to check in shorter periods than one year. The inspection has also to be carried out after accidents and special incidents.

#### 4.2 Test criteria for the regular visual inspection by the user

- Ensure correct bolt and nut size, quality and length
- Ensure compatibility of bolt thread and tapped hole → inspect the torque
- Completeness of the lifting point.
- Complete, readable WLL statements as well as manufacturer sign
- Deformation at load bearing components like base body and bolts
- Mechanical damage such as significant notches, particularly in areas subject to tensile stress.

#### 4.3 Additional test criteria for the competent person / repair worker

- Reduction of cross-section due to wear >10 % (see *Pic. 1 Wear indicators*)
- Strong corrosion
- Function and damage at the bolt, nut and/or thread.
- further checks may be required, depending on the result of the risk assessment (e.g. testing for cracks in load-bearing parts).

#### 4.4 Disposal

Dispose worn out components / attachments or packaging according to the local waste removal requirements.


Method of lift												
number of legs	1	1	1	2	2	2	2	2	2	3/4	3/4	3/4
Angle of inclination	0°-7°	90°	90°	0°-7°	90°	90°	0-45°	45°-60°	Unsymm.	0-45°	45°-60°	Unsymm.
Faktor	1	1	1	2	2	2	1.4	1	1	2.1	1.5	1
Type	For the max. total load weight >G< in metric tons [t]											
B-ABA 1.6 t	1.6	1.6	1.6	3.2	3.2	3.2	2.2	1.6	1.6	3.4	2.4	1.6
B-ABA 3.2 t	3.2	3.2	3.2	6.4	6.4	6.4	4.5	3.2	3.2	6.8	4.8	3.2
B-ABA 5 t	5.0	5.0	5.0	10	10	10	7.1	5	5	10.6	7.5	5
B-ABA 10 t	10.0	10.0	10.0	20	20	20	14.1	10	10	21.2	15	10
B-ABA 20 t	20.0	20.0	20.0	40	40	40	28	20	20	42	30	20
B-ABA 31.5 t	31.5	31.5	31.5	63	63	63	45	31.5	31.5	67	47.5	31.5
At a lift with one strand and two parallel strands where the inclination angles are at the max. ± 7°. the lifting method can be assumed as a vertical lift.						When lifting with two, three or four leg lifting means, inclination angles of less than 15° shall be avoided, if possible (Risk of instability).						

Table 3: WLL in [t]


Type	WLL Lifting [t]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	F [mm]	G [mm]	H [mm]	T [mm]	L [mm]	M	weight [kg/pc.]	Ref.-No.
B-ABA 1.6 t	1.6	75	16	100	35	16	62.5	55	55	46.5	13	4 x M10	0.9	7906266
B-ABA 3.2 t	3.2	92	23	137	50	21	86	70	75	65	16	4 x M12	2.0	7906267
B-ABA 5 t	5	113	27	172	60	28	108	84	95	80	24	4 x M16	4.1	7906268
B-ABA 10 t	10	146	38	228	80	36	141	110	125	105	25	4 x M20	9.3	7906269
B-ABA 20 t	20	200	52	272	115	40	188	150	75	148	30	6 x M24	18.8	7906270
B-ABA 31.5 t	31.5	230	64	320	130	50	215	175	87.5	165	40	6 x M30	29.5	7906271

Table 4: Dimensioning

Subject to technical alterations.

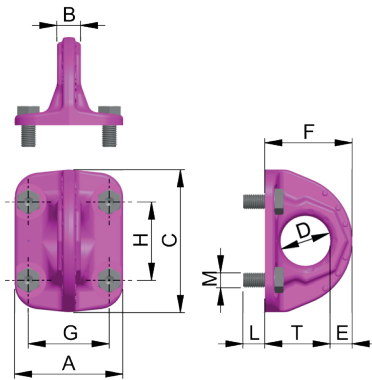

Pic. 2: Dimensioning B-ABA 1.6 t - 10 t

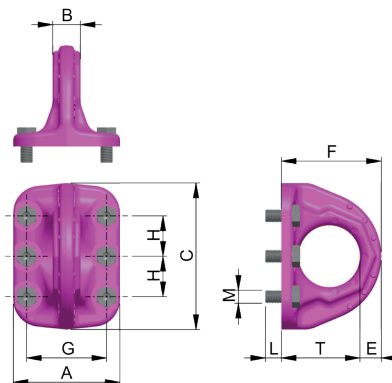


Pic. 3: Dimensioning B-ABA 20 t - 31.5 t

Type	K [mm]	L <sub>max</sub> [mm]	M	used bolt	Ref.-No. ICE-bolt
B-ABA 1.6 t	20	13	4 x M10	M10	7904910
B-ABA 3.2 t	25	16	4 x M12	M12	7904911
B-ABA 5 t	35	24	4 x M16	M16	7905925
B-ABA 10 t	40	25	4 x M20	M20	7904913
B-ABA 20 t	50	30	6 x M24	M24	7904914
B-ABA 31.5 t	60	40	6 x M30	M30	7904915


Table 5: *Standard-ICE-bolts (thread all the way up to the head)*

Type	K [mm]	L <sub>max</sub> [mm]	M	used bolt	Ref.-No. ICE-bolt
B-ABA 1.6 t	125	118	4 x M10	M10 x 125	7905920
B-ABA 3.2 t	145	136	4 x M12	M12 x 145	7905921
B-ABA 5 t	185	174	4 x M16	M16 x 185	7908216
B-ABA 10 t	230	215	4 x M20	M20 x 230	7908217
B-ABA 20 t	265	245	6 x M24	M24 x 265	7908218
B-ABA 31.5 t	340	320	6 x M30	M30 x 340	7908418

Table 6: *Vario-ICE-bolts (thread all the way up to the head)*

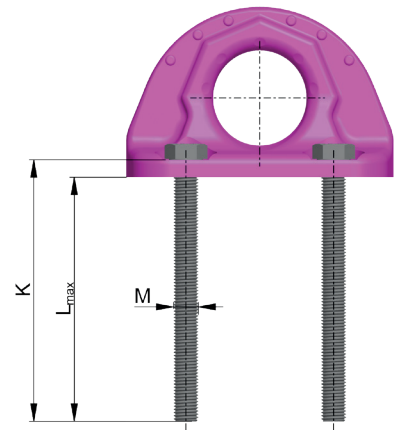

Pic. 4: *B-ABA bolt length*

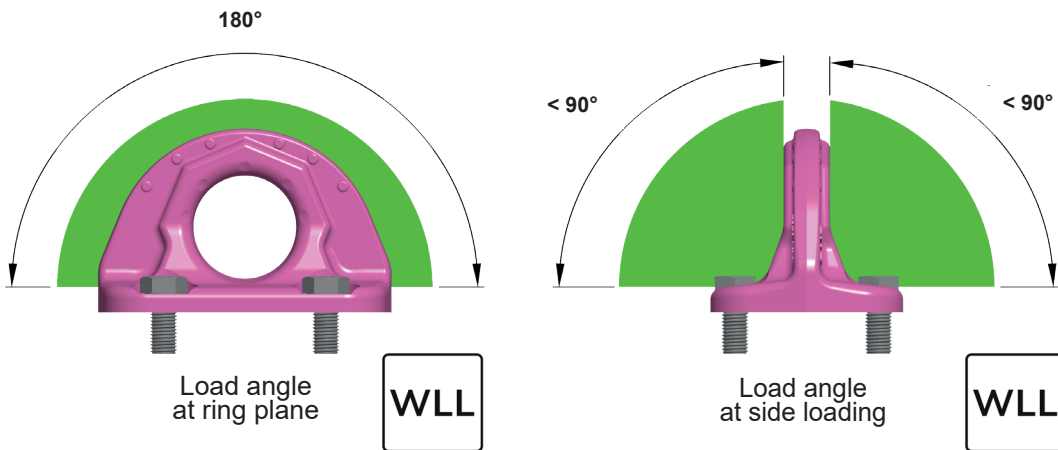

Pic. 5: *Permitted loading directions*