


> VCGH-G <

Excavator hook for bolting



Safety instructions

This safety instruction has to be kept on file for the whole lifetime of the product and forwarded with the product.
TRANSLATION OF THE ORIGINAL INSTRUCTIONS

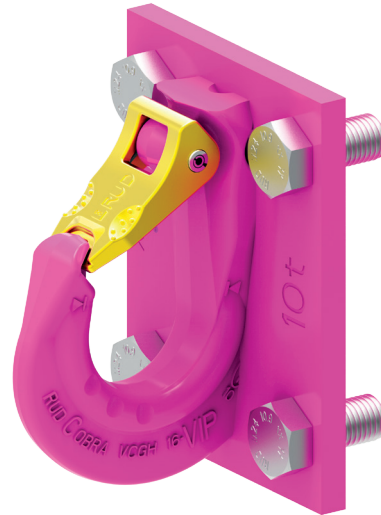

Excavator hook for bolting
VCGH-G



RUD Ketten
Rieger & Dietz GmbH u. Co. KG
 73432 Aalen
 Tel. +49 7361 504-1370
 sling@rud.com
 www.rud.com

RUD-Art.-Nr.: 8502511-EN - V03 / 10.024

EG-Konformitätserklärung

entsprechend der EG-Maschinenrichtlinie 2006/42/EG, Anhang II A und ihren Änderungen

Hersteller: **RUD Ketten**
Rieger & Dietz GmbH u. Co. KG
 Friedensinsel
 73432 Aalen

Hiermit erklären wir, dass die nachfolgend bezeichnete Maschine aufgrund ihrer Konzipierung und Bauart, sowie in der von uns in Verkehr gebrachten Ausführung, den grundlegenden Sicherheits- und Gesundheitsanforderungen der EG-Maschinenrichtlinie 2006/42/EG sowie den unten aufgeführten harmonisierten und nationalen Normen sowie technischen Spezifikationen entspricht.
 Bei einer nicht mit uns abgestimmten Änderung der Maschine verliert diese Erklärung ihre Gültigkeit.

Produktbezeichnung: Anbauhaken
VABH-B / VABH-W / VCGH-G / VCGH-S

Folgende harmonisierten Normen wurden angewandt:

<u>DIN EN 1677-1 : 2009-03</u>	<u>DIN EN ISO 12100 : 2011-03</u>
_____	_____
_____	_____

Folgende nationalen Normen und technische Spezifikationen wurden außerdem angewandt:

<u>DGUV-R 109-017 : 2020-12</u>	<u>DIN 15428 : 1978-08</u>
_____	_____
_____	_____

Für die Zusammenstellung der Konformitätsdokumentation bevollmächtigte Person:
 Michael Betzler, RUD Ketten, 73432 Aalen

Aalen, den 15.04.2021 Hermann Kolb, Bereichsleitung MA *Hermann Kolb*
 Name, Funktion und Unterschrift Verantwortlicher

EC-Declaration of conformity

According to the EC-Machinery Directive 2006/42/EC, annex II A and amendments

Manufacturer: **RUD Ketten**
Rieger & Dietz GmbH u. Co. KG
 Friedensinsel
 73432 Aalen

We hereby declare that the equipment sold by us because of its design and construction, as mentioned below, corresponds to the appropriate, basic requirements of safety and health of the corresponding EC-Machinery Directive 2006/42/EC as well as to the below mentioned harmonized and national norms as well as technical specifications.
 In case of any modification of the equipment, not being agreed upon with us, this declaration becomes invalid.

Product name: Bolt on / Weld on hook
VABH-B / VABH-W / VCGH-G / VCGH-S

The following harmonized norms were applied:

<u>DIN EN 1677-1 : 2009-03</u>	<u>DIN EN ISO 12100 : 2011-03</u>
_____	_____
_____	_____

The following national norms and technical specifications were applied:

<u>DGUV-R 109-017 : 2020-12</u>	<u>DIN 15428 : 1978-08</u>
_____	_____
_____	_____

Authorized person for the configuration of the declaration documents:
 Michael Betzler, RUD Ketten, 73432 Aalen

Aalen, den 15.04.2021 Hermann Kolb, Bereichsleitung MA *Hermann Kolb*
 Name, function and signature of the responsible person

CONTENT

1	Safety instructions	2
2	Intended use	2
3	Assembly- and instruction manual	2
3.1	General information	2
3.2	Hints for the assembly	2
3.3	Hints for the usage	3
4	Inspection / Repair / Disposal	4
4.1	Hints for periodical inspections	4
4.2	Test criteria for the regular visual inspection by the user	4
4.3	Additional test criteria for the competent person / repair worker	4
4.4	Disposal	4



Carefully read the operating instructions before using the lifting point VCGH-G. Ensure that you have understood all the contents.

Non-observation of the instructions can lead to injuries or damage and will invalidate the guarantee.

1 Safety instructions



WARNING

Incorrectly mounted or damaged lifting points and improper use can lead to injuries and damage to objects after a fall.

Check the lifting points carefully every time before use.

- Withdraw all body parts (fingers, hands, arms etc.) from the danger zone during the lifting process (risk of crushing).
- The RUD lifting points VCGH-G may only be used by authorised and instructed persons in compliance with the DGUV Regulations 109-017 and in compliance with any valid national regulations if used outside Germany.
- Do not exceed the working load limit (WLL) indicated on the lifting point.
- No technical modifications must be made at the VCGH-G.
- No persons are allowed in the danger zone.
- Standing below suspended loads is prohibited.
- Jerky lifting (strong impacts) should be prevented.
- Always ensure a stable position of the load when lifting. Swinging must be prevented.
- Damaged or worn VCGH-G must not be used.

2 Intended use

- VCGH-G lifting points must only be attached at a load or used at load accepting means.
- Their usage is intended to be used as lifting means.
- VCGH-G lifting points can also be used as lashing points for fixing lashing means.
- VCGH-G lifting points must only be used in the here described operation purpose.

3 Assembly- and instruction manual

3.1 General information

- Effects of temperature:
Due to the DIN/EN bolts that are used in the VCGH-G lifting points, the working load limit must be reduced accordingly:
 - -20°C up to 100°C no reduction (-20°F to 212°F)
 - 100°C up to 200°C minus 15 % (212°F to 392°F)
 - 200°C up to 250°C minus 20 % (392°F to 482°F)
 - 250°C up to 350°C minus 25 % (482°F to 662°F)

Temperatures above 350°C (662°F) are not permitted!

- VCGH-G lifting points must not come into contact with aggressive chemicals, acids and their vapours.
- The place where the VCGH-G lifting points are fixed should be clearly marked with colour.
- VCGH-G lifting points are supplied with crack test inspected ICE-bolts.
- Original ICE-bolts are available as a spare part from RUD.
- **When using your own bolts, the bolts have to be 100 % crack tested** (a written confirmation of the absence of cracks must be added to the documentation). The min. quality of the hexagon bolt had to be 10.9 accord. EN 24014 (DIN 931) with the nominal diameter.



ATTENTION

A combination of bolts made of different strength classes is not allowed to be used for a fixation of the excavator hooks.

3.2 Hints for the assembly

Basically essential:

- The material construction to which the lifting point will be attached, should be of adequate strength to withstand forces during lifting without deformation. The German testing authority BG/DGUV, recommends the following minimum for bolt lengths:
 - 1 x M in steel (minimum quality S235JR [1.0037])
 - 1.25 x M in cast iron (for example GG 25)
 - 2 x M in aluminium alloys
 - 2.5 x M in light metals of low strength
(M = diameter of RUD lifting point bolt, for ex. M 20)

When lifting light metals, nonferrous heavy metals and gray cast iron the thread has to be chosen in such a way that the working load limit of the thread corresponds to the requirements of the respective base material.

- VCGH-G lifting points must be positioned at the load in such a way that improper loading like turning or twisting of the load will be avoided:
 - **For single leg lifts:** Load ring should be positioned vertically above the centre of gravity.
 - **For two leg lifts:** Lifting points must be positioned on both sides and above the centre of gravity.
 - **For three and four leg lifts:** Lifting points should be arranged equally in a plain level around centre of gravity
- Symmetry of loading:
Determine the working load limit of each individual RUD lifting point for symmetrical loading according to the following physical formula:

$$W_{LL} = \frac{G}{n \times \cos \beta}$$

W_{LL} = working load limit (kg)
 G = load weight (kg)
 n = number of load bearing legs
 β = angle of inclination of the chain to the vertical

Number of load bearing strands:

	Symmetrical
Double leg	2
Three/four leg	3


Table 1: Load bearing strands (see table 3)



HINT

At unsymmetrical loads, even if several lifting points are used, the WLL of a single lifting point must be at least equal to the load weight or ask the manufacturer.

- A plane bolting surface must be guaranteed. The holes must be drilled with a sufficient depth in order to guarantee compatibility with the supporting surface.
- Arrangement/position of the VCGH-G:
The installation should be in the direction of pull (see Pic. 1).

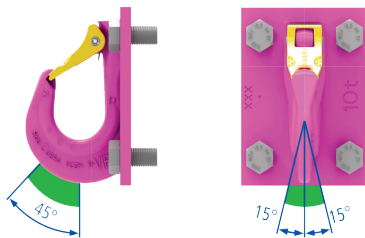

Pic. 1: Permissible load direction

- The bolts should be tightened with the specified torque (see Table 2).



HINT

* Bolts have to be tightened by using the outside hexagon with a wrench.

Type	torque bolts [Nm] *	thread d	wrench size SW
VCGH-G 6*	100	M12	18
VCGH-G 8*	100	M12	18
VCGH-G 10*	240	M16	24
VCGH-G 13*	450	M20	30
VCGH-G 16	800	M24	36
VCGH-G 20	800	M24	36
VCGH-G 22	950	M24	36

Table 2: torque (* are replaced by type VABH-B)

- With shock loading or vibrations, especially at through hole fixtures with a nut at the end of the bolt, accidental release can occur.

Securing possibilities: Observe torque moment, use liquid securing glue f.e. Loctite (can be adapted to the usage, observe manufacturer hints) or assemble a form closure bolt locking device f.e. a castle nut with cotter pin, locknut etc.

- Finally check the proper assembly (see 4 Inspection / Repair / Disposal).

3.3 Hints for the usage

- Always regularly observe the appearance of the whole lifting point (e.g. fixed lifting point/slings) before using it (secured bolt seat/torque, strong corrosion, cracks on load-bearing parts, deformations) see 4 Inspection / Repair / Disposal.




ATTENTION

Wrong assembled or damaged VCGH-G as well as improper use can lead to injuries of persons and damage of objects when load drops.

Please inspect all VCGH-G carefully before each use.

- RUD components are designed according to DIN EN 818 and DIN EN 1677 for a dynamic load of 20,000 load cycles.
 - Keep in mind that several load cycles can occur with a lifting procedure.
 - Keep in mind that, due to the high dynamic stress with high numbers of load cycles, that there is a danger that the product will be damaged.
 - The BG/DGUV recommends: For higher dynamic loading with a high number of load cycles (continuous operation), the working load stress must be reduced according to the driving mechanism group 1Bm (M3 in accordance with DIN EN 818-7). Use a lifting point with a higher working load limit.
- Please check carefully the wear indicator markings of the lifting point (see Pic. 2):

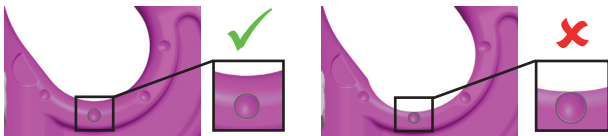

Usage permitted
no wear marks visible

Use prohibited:
Replacement criteria reached. Material all the way down to the wear lenses has gone.

Pic. 2: Wear indicators

- Keep in mind that the lifting means in the VCGH-G must be freely movable. When attaching and removing the lifting means (e.g. lifting chains), crushing, shearing, trapping and impact spots must be prevented.
- Prevent damage being caused to the lifting means by loading at sharp edged.
- If the VCGH-G is exclusively used for lashing, the load-bearing capacity value can be doubled:
LC = Permitted lashing force = 2 x load-bearing capacity (WLL)



HINT

If the VCGH-G is/was used as a lashing point, with a force higher than the WLL, it must not be used as a lifting point afterwards.

If the VCGH-G is/was used as a lashing point, up to the WLL only, it can still be used afterwards as a lifting point.

- If possible, leave the immediate danger zone.
- Always supervise your suspended loads.

4 Inspection / Repair / Disposal

4.1 Hints for periodical inspections

The operator must determine and specify the nature and scope of the required tests as well as the periods of repeating tests by means of a risk assessment (see section 4.2 and 4.3).

The continuing suitability of the lifting point must be checked at least 1x year by an expert.

Depending on the application conditions, e.g. when used frequently or if there is a higher level of wear or corrosion, it may be necessary to carry out inspections at intervals of less than a year. This inspection is also absolutely necessary after damage and special incidents.

The inspection cycles must be specified by the operator.

Only RUD original spare parts must be used and all repairing operations and service work must be documented in the chain card file (of the complete lifting mean) or use the AYE-D.NET.

4.2 Test criteria for the regular visual inspection by the user

- The lifting point should be complete
- Comprehensive, legible load-bearing information as well as the manufacturer's identification mark.
- Correct bolt sizes, bolt quality and screw-in lengths
- Always observe tightness of the bolts → inspect the torque
- The excavator hook has to be mount on plane bolting surfaces with the full back side.
- Deformations on load-bearing parts such as basic body and bolt
- Mechanical damage, such as notches, particularly in high stress areas.

4.3 Additional test criteria for the competent person / repair worker

- Cross-section alterations caused by wear > 10 % (see wear indicator markings)
- opening of the mouth is deformed > 10 %
- Strong corrosion (pitting)
- Other damage
- Additional inspections may be necessary depending on the result of the risk assessment (e.g. incipient cracks at load bearing parts).

4.4 Disposal

Dispose of the discarded components / accessories or packaging in line with local regulations.

Method of lift								
Number of legs	1	2	2	2	2	3 / 4	3 / 4	3 / 4
Angle of inclination β	90°	90°	0-45°	45-60°	unsymm.	0-45°	45-60°	unsymm
Factor	1	2	1.4	1	1	2.1	1.5	1
Type	For the max. total load weight >G< in metric tons / lbs							
VCGH-G 6 *	1.5 t 3300 lbs	3 t 6600 lbs	2.1 t 4620 lbs	1.5 t 3300 lbs	1.5 t 3300 lbs	3.15 t 6930 lbs	2.25 t 4950 lbs	1.5 t 3300 lbs
VCGH-G 8 *	2.5 t 5500 lbs	5 t 11000 lbs	3.5 t 7700 lbs	2.5 t 5500 lbs	2.5 t 5500 lbs	5.25 t 11550 lbs	3.75 t 8250 lbs	2.5 t 5500 lbs
VCGH-G 10 *	4 t 8800 lbs	8 t 17600 lbs	5.6 t 12300 lbs	4 t 8800 lbs	4 t 8800 lbs	8.4 t 18500 lbs	6 t 13200 lbs	4 t 8800 lbs
VCGH-G 13 *	6.5 t 14300 lbs	13 t 28600 lbs	9.1 t 20000 lbs	6.5 t 14300 lbs	6.5 t 14300 lbs	13.65 t 30000 lbs	9.75 t 21450 lbs	6.5 t 14300 lbs
VCGH-G 16	10 t 22000 lbs	20 t 44000 lbs	14 t 30800 lbs	10 t 22000 lbs	10 t 22000 lbs	21 t 46200 lbs	15 t 33000 lbs	10 t 22000 lbs
VCGH-G 20	16 t 35200 lbs	32 t 70400 lbs	22.4 t 49300 lbs	16 t 35200 lbs	16 t 35200 lbs	33.6 t 74000 lbs	24 t 52800 lbs	16 t 35200 lbs
VCGH-G 22	20 t 44000 lbs	40 t 88000 lbs	28 t 61600 lbs	20 t 44000 lbs	20 t 44000 lbs	42 t 92400 lbs	30 t 66000 lbs	20 t 44000 lbs


Table 3: WLL overview

* are replaced by type VABH-B


Type	WLL [t]	weight [kg/pc.]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	F [mm]	G [mm]	H [mm]	J [mm]	L [mm]	M [mm]	T [mm]	torque [Nm]	Ref-no.	Safety set
VCGH-G 6*	1,5	0,9	10	68	92	100	100	25	70	60	37	15	4xM12	20	100	*	7100299
VCGH-G 8*	2,5	1,7	10	84	125	135	110	30	80	75	41	15	4xM12	28	100	*	7100300
VCGH-G 10*	4	2,4	12	106	148	155	130	35	95	100	50	23	4xM16	36	240	*	7100301
VCGH-G 13*	6,5	4,4	15	120	170	185	160	40	110	120	60	25	4xM20	38	450	*	7100302
VCGH-G 16	10	6,4	15	141	200	220	170	48	120	150	70	35	4xM24	49	800	7984048	7100303
VCGH-G 20	16	10,4	20	187	272	288	210	63	150	110	87	30	6xM24	69	800	7984311	7101604
VCGH-G 22	20	17,5	20	196	276	292	240	63	150	110	92	30	6xM24	74	950	7984313	7101604

Table 4: Dimensioning * are replaced by type VABH-B

Subject to technical modifications

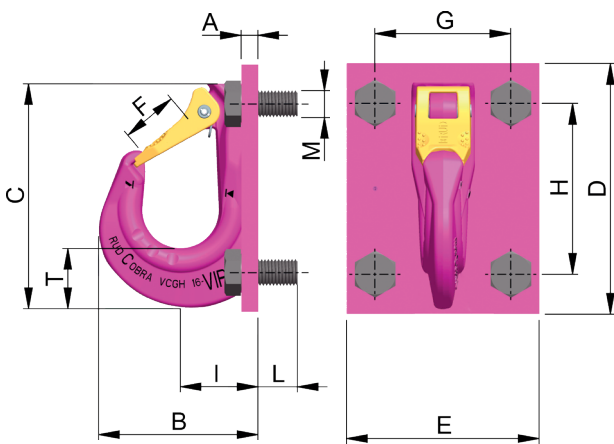

Pic. 3: Dimensioning VCGH-G 6 up to 16

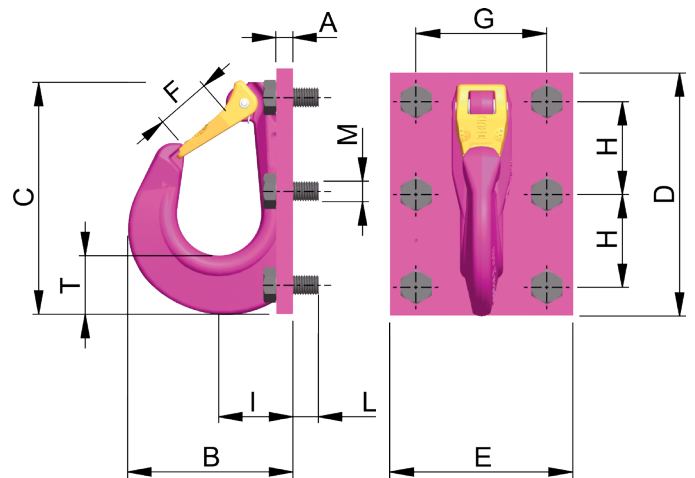

Pic. 4: Dimensioning VCGH-G 20 and 22